


BELTON Rear exhaust system

Suitable for sanding jobs in narrow spaces, recessed corners or on curved surfaces.




Model **BB-10** Belt Size 10 mm (W)

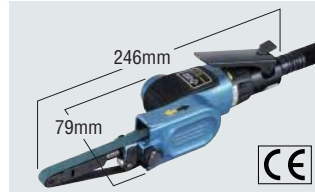


Model **B-10B** Belt Size 10 mm (W)



Model **B-20C** Belt Size 20 mm (W)

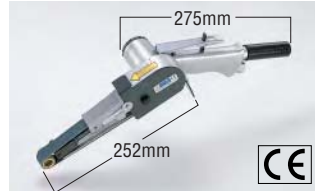

Model **B-30B** Belt Size 30 mm (W)

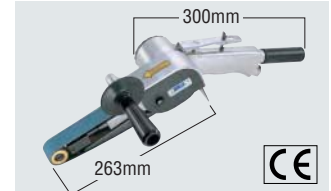

Specifications

Model	BB-10	B-10B	B-20C	B-30B
Rated Air Pressure MPa {kgf/cm ² }	0.63 {6.4}	0.59 {6}	0.59 {6}	0.59 {6}
Air Consumption (No load) m ³ /min	0.25	0.4	0.52	0.68
Motor Free Speed min ⁻¹ (rpm)	16,000	17,000	17,000	14,000
Belt Speed m/min	1,000	1,060	2,500	1,800
Hose Size inch	1/4	1/4	1/4	1/4
Mass (Weight) kg	0.6	0.9	1.4	2.9

Standard Accessories

- Hex. Socket Screw Key 1.5 mm : 1 pc.
- Cupla HA-65SN : 1 pc.
- Abrasive Belt Z#120 x 10 mm : 1 pc.
- Abrasive Belt Z#180 x 10 mm : 1 pc.
- Abrasive Belt Z#240 x 10 mm : 1 pc.

- Bushing PT1/4 x NPT1/4 : 1 pc.
- Hex. Socket Screw Key 4 mm : 1 pc.
- Convex Shoe : 1 pc.
- Abrasive Belt Z#60 x 20 mm : 1 pc.
- Abrasive Belt Z#80 x 20 mm : 1 pc.
- Abrasive Belt Z#100 x 20 mm : 1 pc.
- Abrasive Belt Z#120 x 20 mm : 1 pc.

- Bushing PT1/4 x NPT1/4 : 1 pc.
- Hex. Socket Screw Key 5 mm : 1 pc.
- Abrasive Belt Z#60 x 30 mm : 1 pc.
- Abrasive Belt Z#80 x 30 mm : 1 pc.
- Abrasive Belt Z#100 x 30 mm : 1 pc.

- Bushing PT1/4 x NPT1/4 : 1 pc.
- Hex. Socket Screw Key 4 mm : 1 pc.
- Hex. Socket Screw Key 1.5 mm : 1 pc.
- Abrasive Belt Z#60 x 10 mm : 1 pc.
- Abrasive Belt Z#80 x 10 mm : 1 pc.
- Abrasive Belt Z#100 x 10 mm : 1 pc.
- Abrasive Belt Z#120 x 10 mm : 1 pc.

Optional Parts

Optional Parts for B-10B

Part No.	Part Name	Q'ty
TP14770	Shoe 6 (for 6 mm belt)	1 pc.
TA99052	Bracket 6 Ass'y (for 6 mm belt)	1 set
TA99041	Guard Pulley Bracket Ass'y	1 set
TB01844	Belt Cover Ass'y (*1)	1 set

*1: For collecting the dust

Abrasive Belt for B-10B

Part No.	Part Name	Q'ty
TB00241	Abrasive Belt Z#60 x 6 mm	50 pcs.
TB00242	Abrasive Belt Z#80 x 6 mm	50 pcs.
TB00243	Abrasive Belt Z#100 x 6 mm	50 pcs.
TB00244	Abrasive Belt Z#120 x 6 mm	50 pcs.
TB00245	Abrasive Belt Z#180 x 6 mm	50 pcs.
TB00246	Abrasive Belt Z#240 x 6 mm	50 pcs.
TA9A237	Abrasive Belt AA#400 x 6 mm	50 pcs.
TA9A064	Abrasive Belt Z#60 x 10 mm	50 pcs.
TB00076	Abrasive Belt Z#80 x 10 mm	50 pcs.
TB00077	Abrasive Belt Z#100 x 10 mm	50 pcs.
TB00247	Abrasive Belt Z#120 x 10 mm	50 pcs.
TB00248	Abrasive Belt Z#180 x 10 mm	50 pcs.
TB00249	Abrasive Belt Z#240 x 10 mm	50 pcs.
TA9A244	Abrasive Belt AA#400 x 10 mm	50 pcs.

Optional Parts for B-20C

Part No.	Part Name	Q'ty
TA99882	Idle Pulley Bracket A Ass'y	1 set
TP02004	Triangular Shoe	1 pc.
TB01868	Belt Cover Ass'y for B-20 (*1)	1 set
TB03329	Belt Cover Ass'y for EB-20 (*1)	1 set

*1: For collecting the dust

Abrasive Belt for B-20C

Part No.	Part Name	Q'ty
TA99605	Abrasive Belt Z#40 x 20 mm	20 pcs.
TA99606	Abrasive Belt Z#60 x 20 mm	20 pcs.
TA99607	Abrasive Belt Z#80 x 20 mm	20 pcs.
TA99608	Abrasive Belt Z#100 x 20 mm	20 pcs.
TA99609	Abrasive Belt Z#120 x 20 mm	20 pcs.
TB00250	Abrasive Belt Z#180 x 20 mm	20 pcs.
TB00251	Abrasive Belt Z#240 x 20 mm	20 pcs.
TA9A252	Abrasive Belt AA#280 x 20 mm	20 pcs.
TA9A253	Abrasive Belt AA#320 x 20 mm	20 pcs.
TA9A254	Abrasive Belt AA#400 x 20 mm	20 pcs.

Optional Parts for B-30B

Part No.	Part Name	Q'ty
TP04083	Convex Shoe for B-30B	1 pc.
TP01869	Belt Cover Ass'y for B-30B (*1)	1 set
TB03102	Offset Bracket Ass'y for EB-30	1 set
TB03330	Belt Cover Ass'y for EB-30 (*1)	1 set

*1: For collecting the dust

Abrasive Belt for B-30B

Part No.	Part Name	Q'ty
TB00252	Abrasive Belt Z#40 x 30 mm	20 pcs.
TB00253	Abrasive Belt Z#60 x 30 mm	20 pcs.
TB00254	Abrasive Belt Z#80 x 30 mm	20 pcs.
TB00255	Abrasive Belt Z#100 x 30 mm	20 pcs.
TB00256	Abrasive Belt Z#120 x 30 mm	20 pcs.
TB00257	Abrasive Belt Z#180 x 30 mm	20 pcs.
TB00258	Abrasive Belt Z#240 x 30 mm	20 pcs.
TA9A262	Abrasive Belt AA#280 x 30 mm	20 pcs.
TA9A263	Abrasive Belt AA#320 x 30 mm	20 pcs.
TA9A264	Abrasive Belt AA#400 x 30 mm	20 pcs.